

WATCHPOD

Installation Guide



TOOLS REQUIRED: Cordless Drill and 1/4" Allen Key




WATCHPOD

Installation Guide

* To prevent possible scratches or damage, ensure product is unloaded carefully.

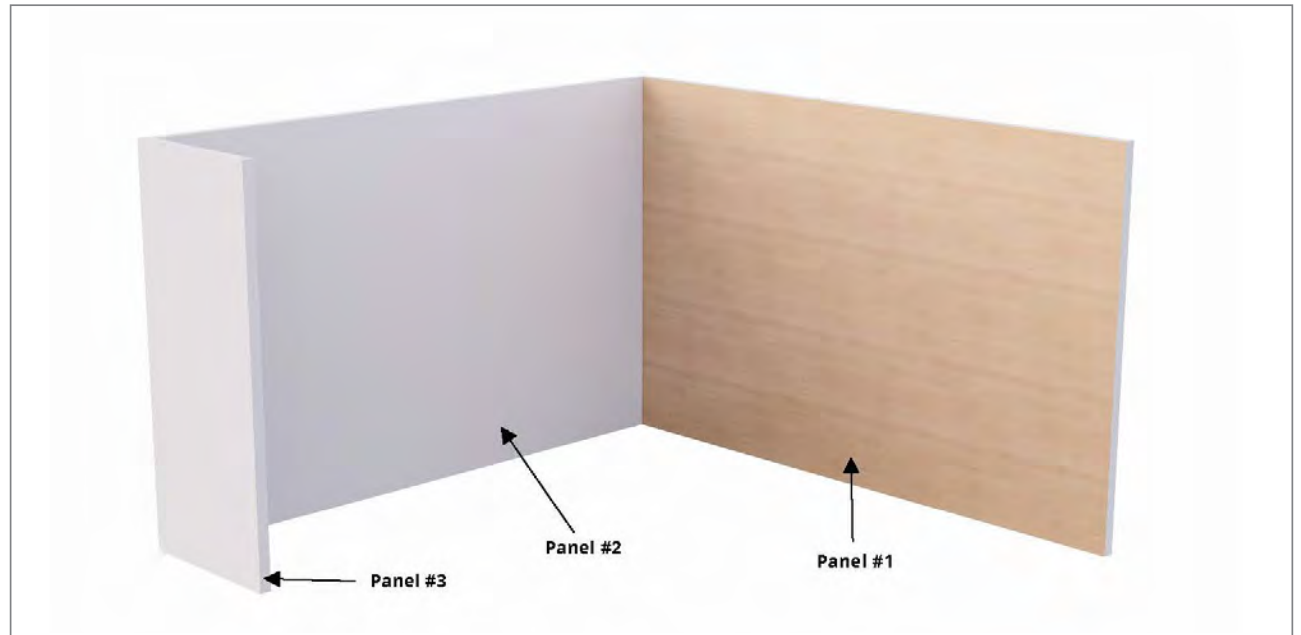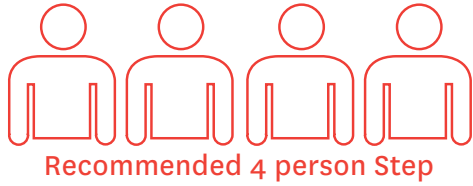



1.

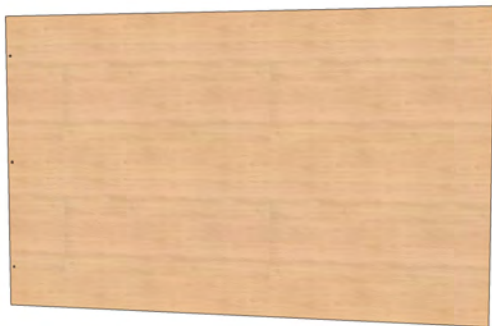

Place first spine panel, and ensure it is level. Use levelers to adjust if needed.

2.

****ENSURE WASHER IS USED ON BOLT!**


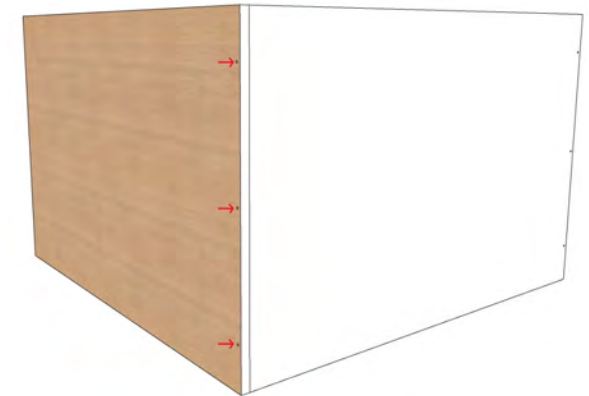
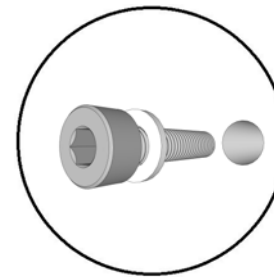


Line up spine and side panels with holes to create 90 degree corner, and start all 3 bolts by hand until threads are engaged. Once engaged, tighten with cordless. Once complete, fasten the bolts tight and ensure both panels are level. Use levelers to adjust.


WATCHPOD

Installation Guide

* To prevent possible scratches or damage, ensure product is unloaded carefully.

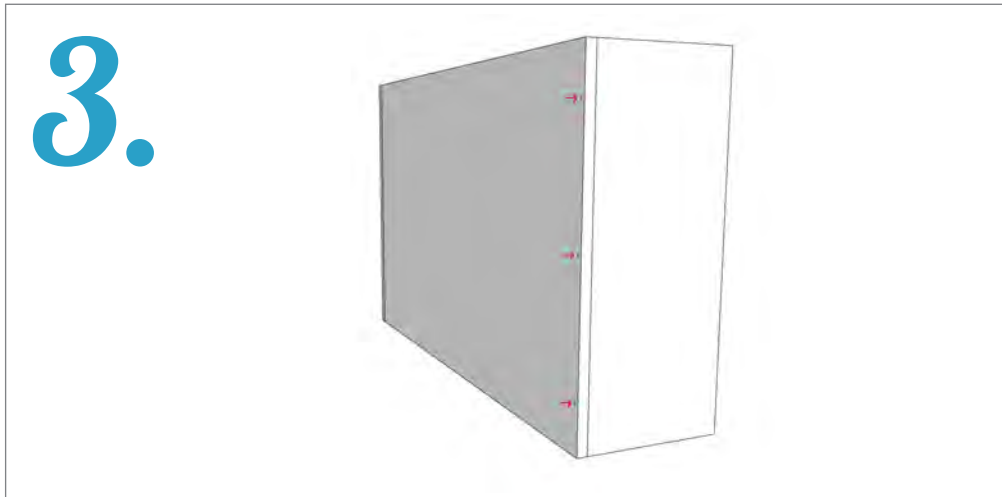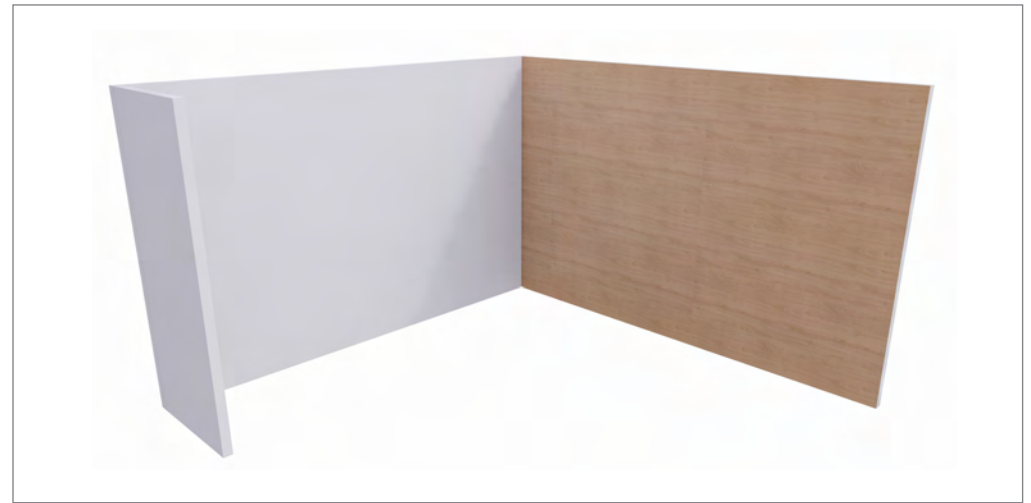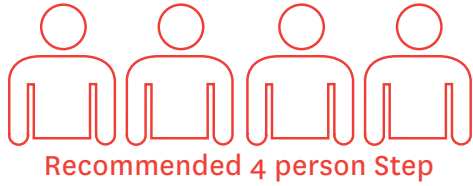

Line up 24" return panel with holes at end of side panel and start all 3 bolts by hand until threads are engaged. Once engaged, tighten with cordless. Once complete, fasten the bolts tight and ensure both panels are level. Use levelers to adjust.

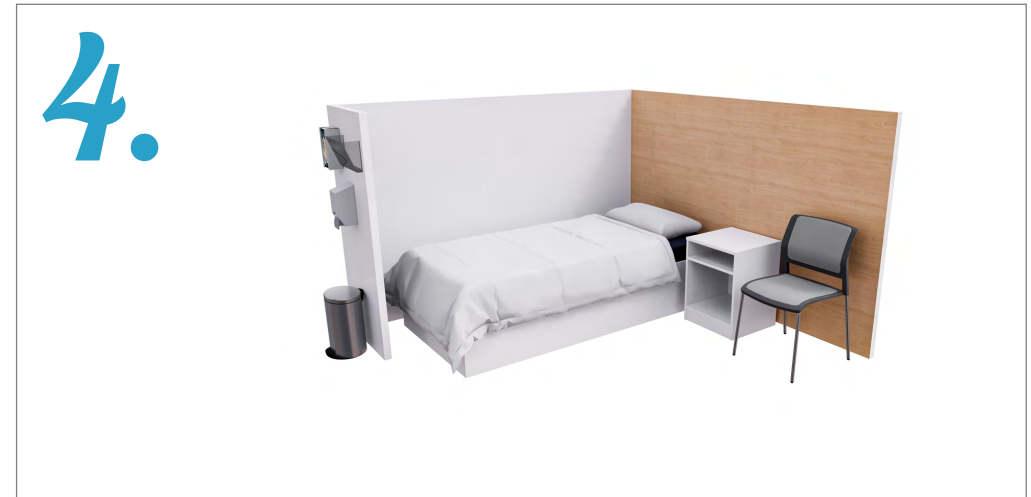

Ensure cover caps are used to cover bolt holes. Then place bed and cabinet in panel system. Install is now complete!